





Abbr.	Measurement
DOB	depth of bulkhead
FCR	floor to underside of crown
FTB	floor to underside of bulkhead
FTS	floor to top of window sill
HBB	baseboard height
HBH	height of bulkhead
HDO	door opening height
HOS	height of step up
HTO	total height
HWO	window opening height
JTB	head jamb to bulkhead
JTC	head jamb to ceiling
JTJ	inside of (door) jamb to inside of (window) jamb
JTW	inside of jamb to wall
LTO	total length
THI	thickness (of wall)
WOO	width of opening
WTJ	wall to inside of jamb

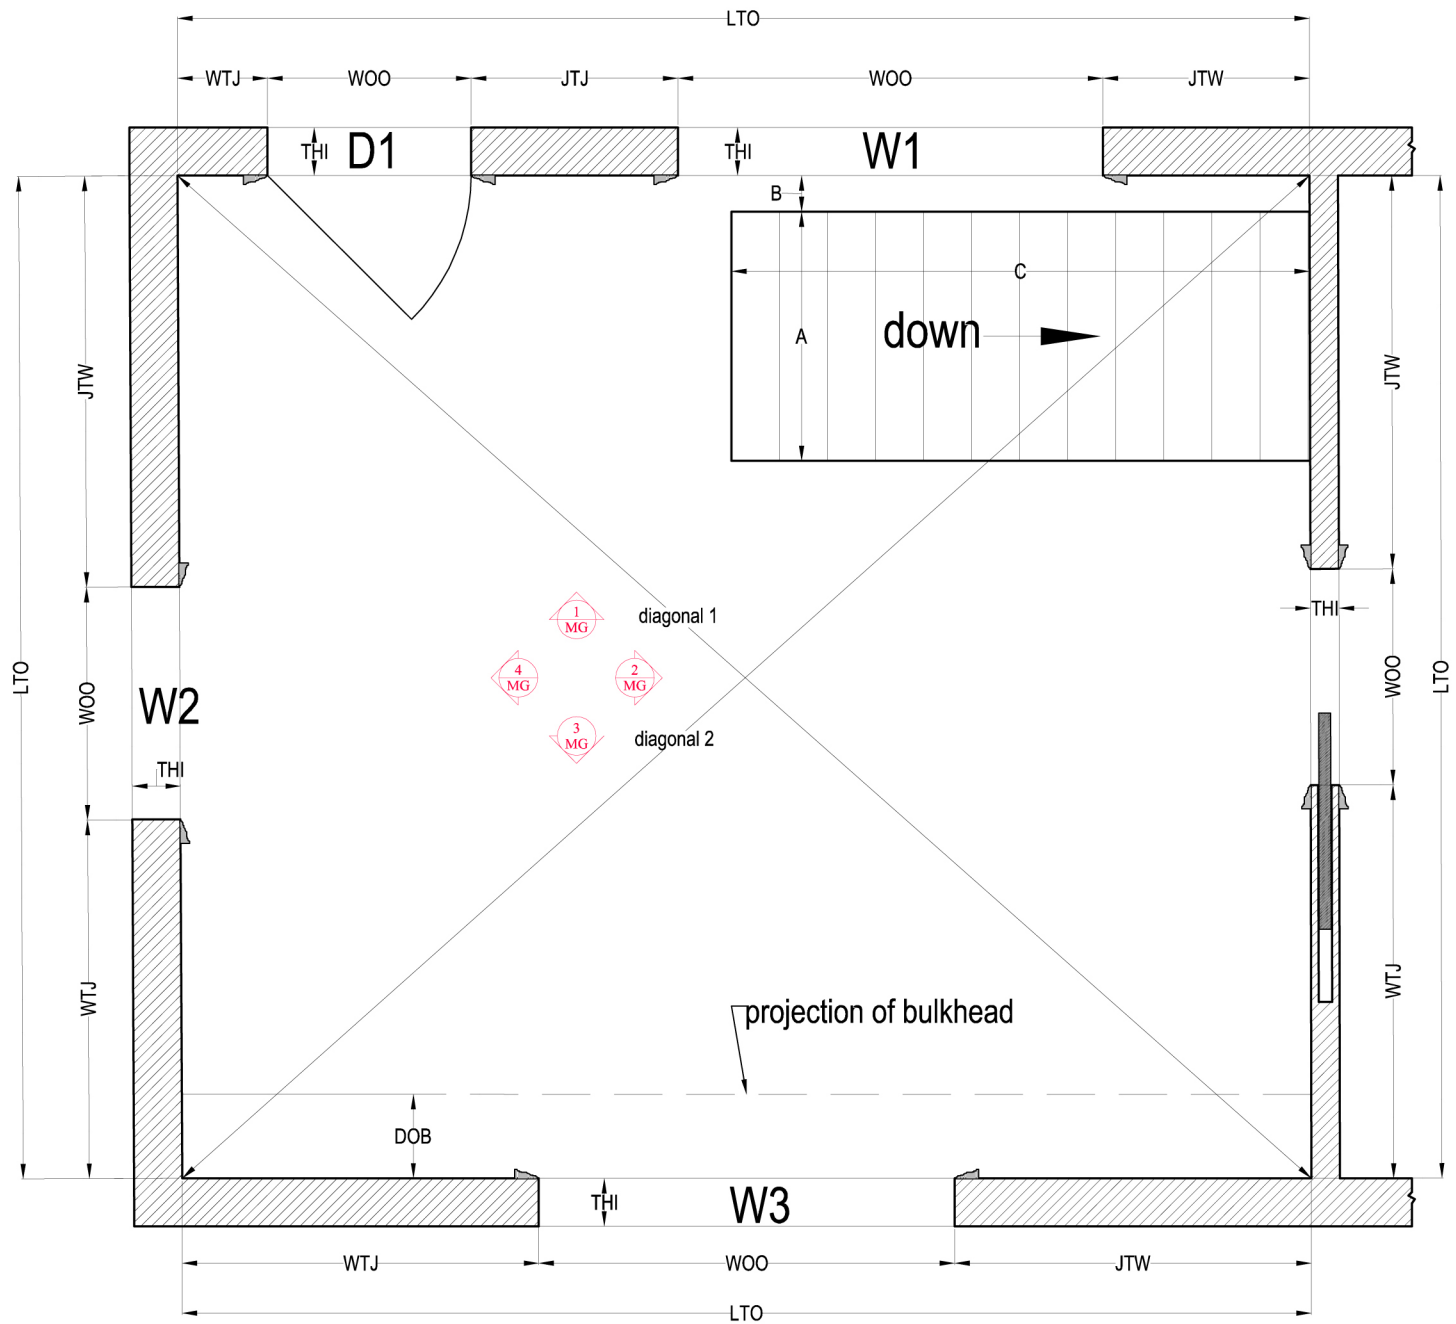


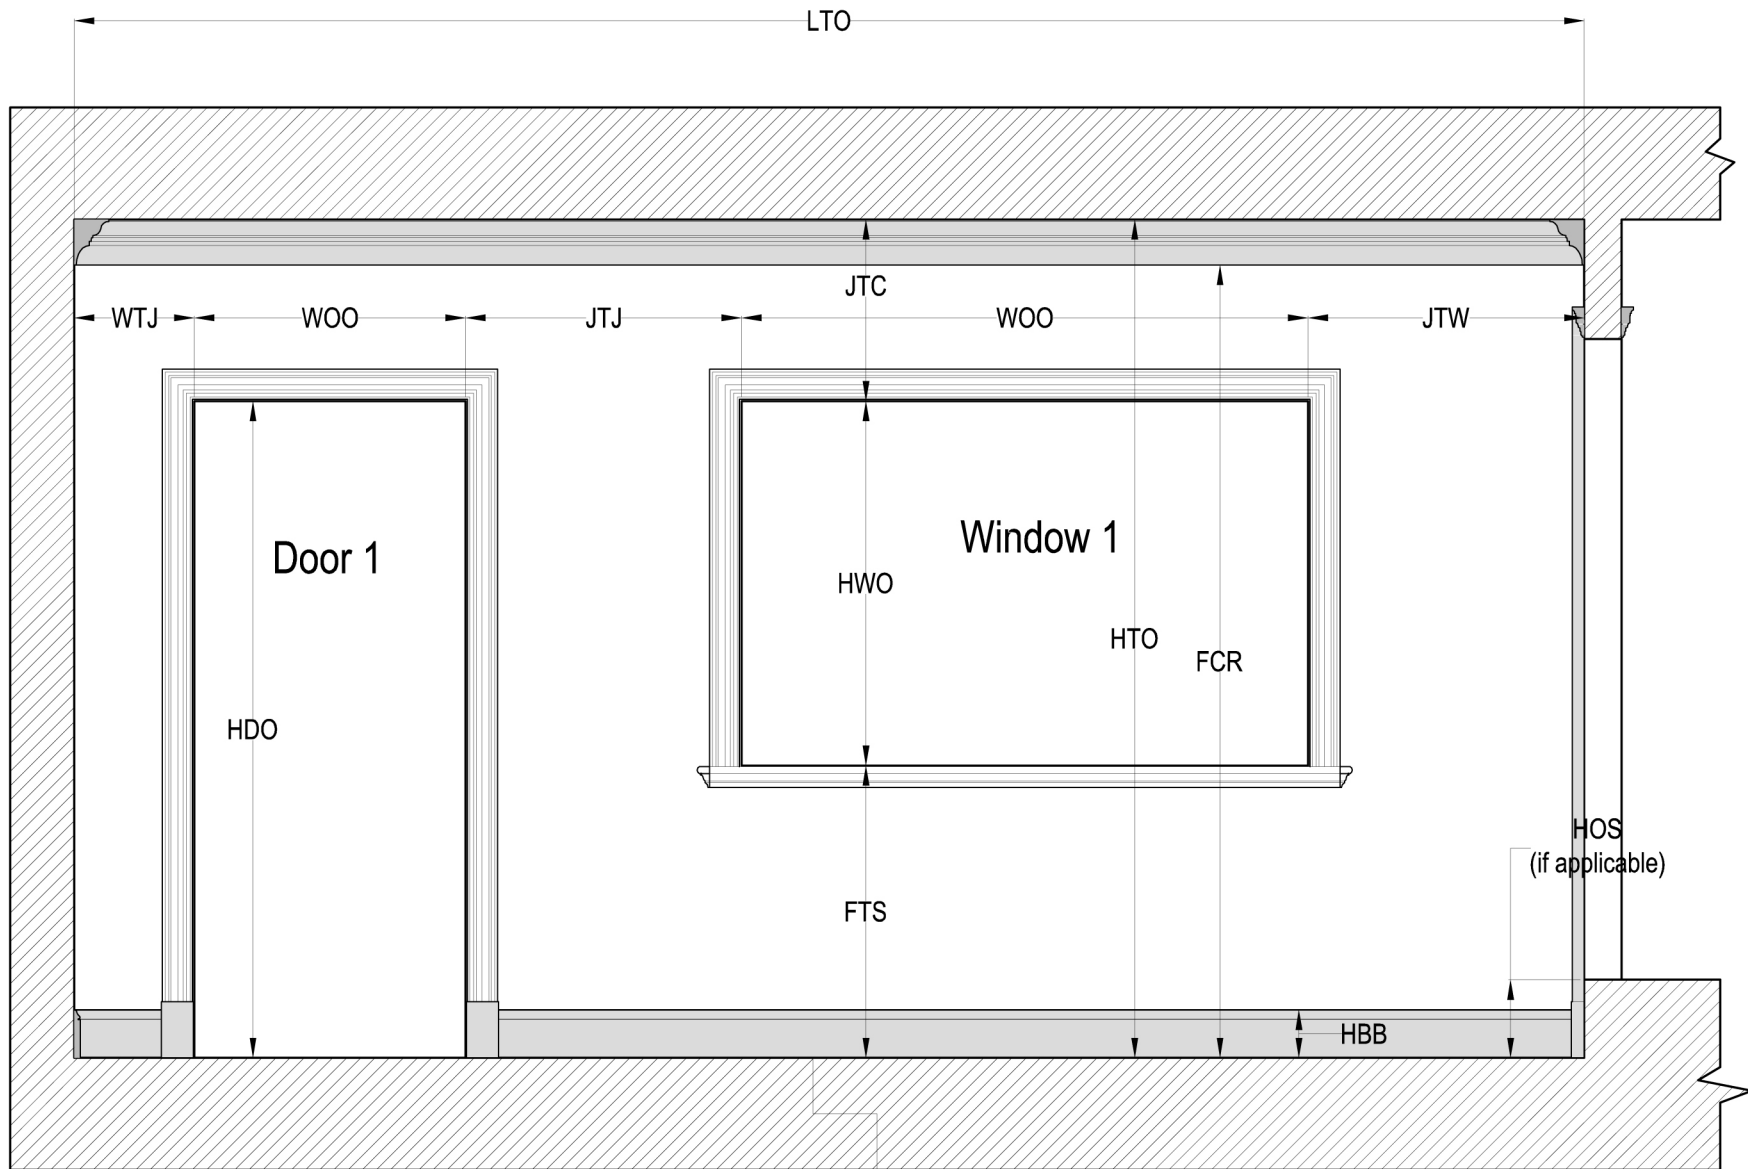


1 ELEVATION
 MG measuring guide- imperial or metric

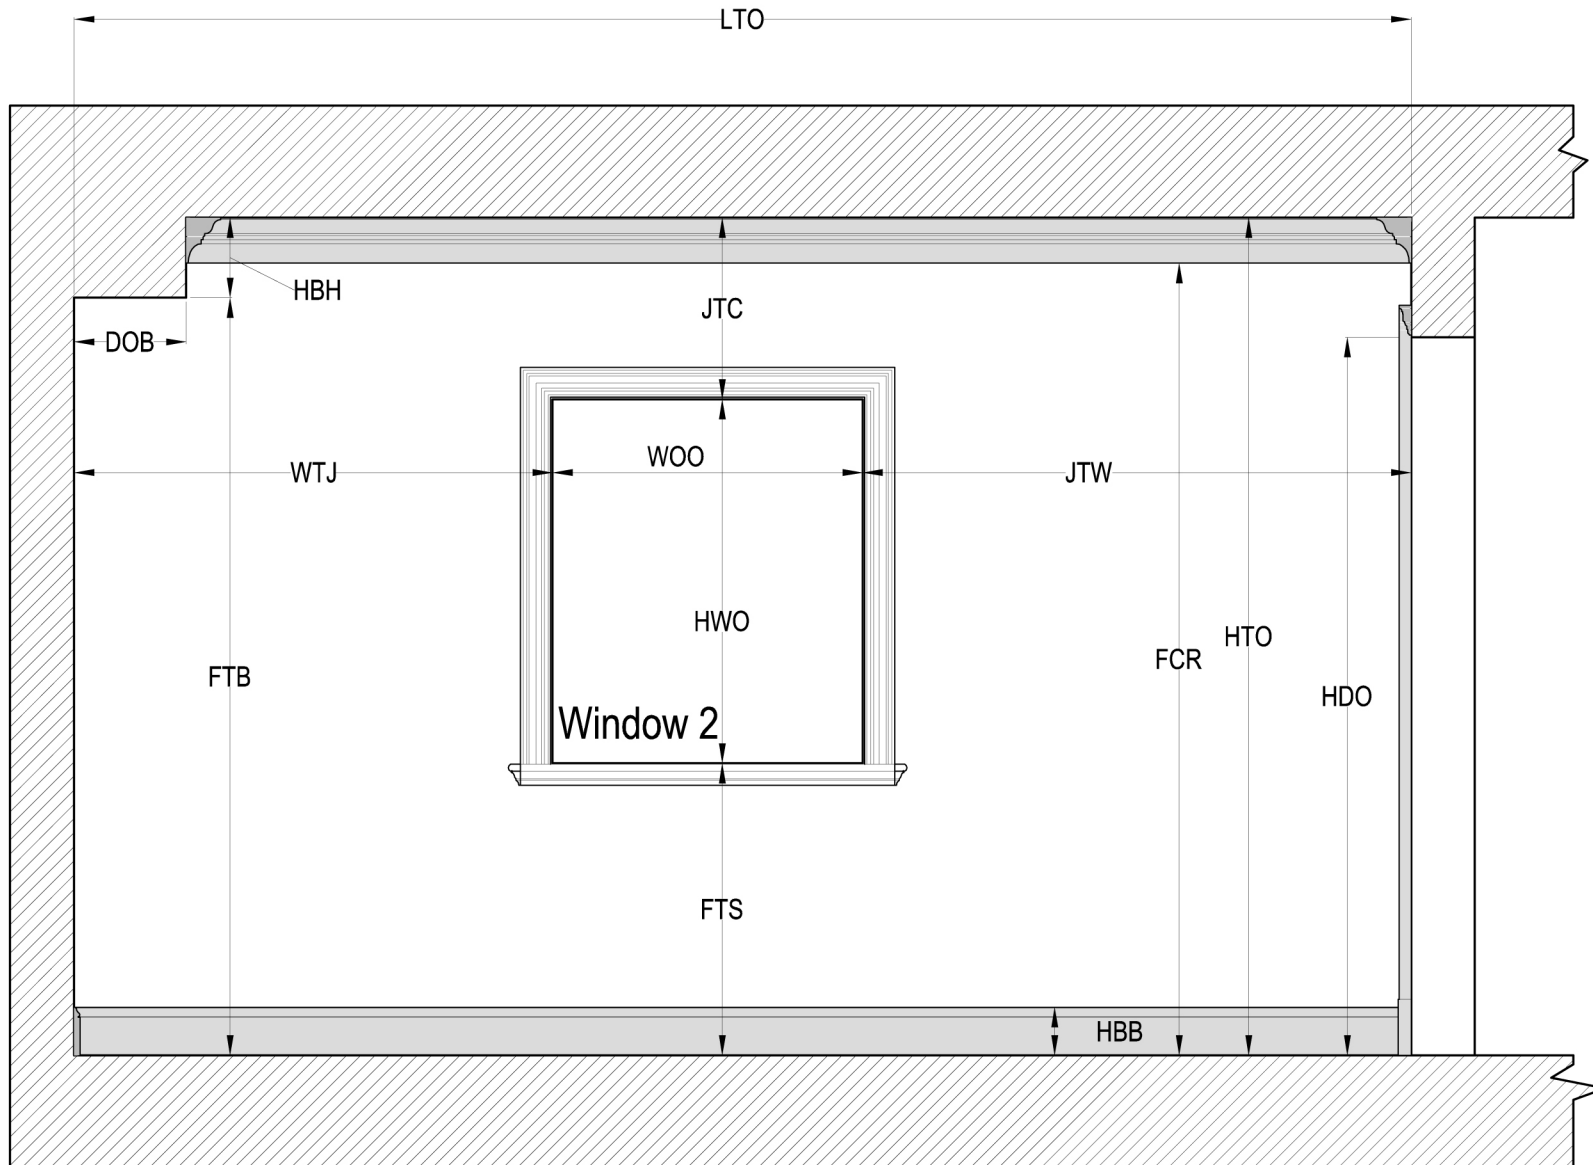


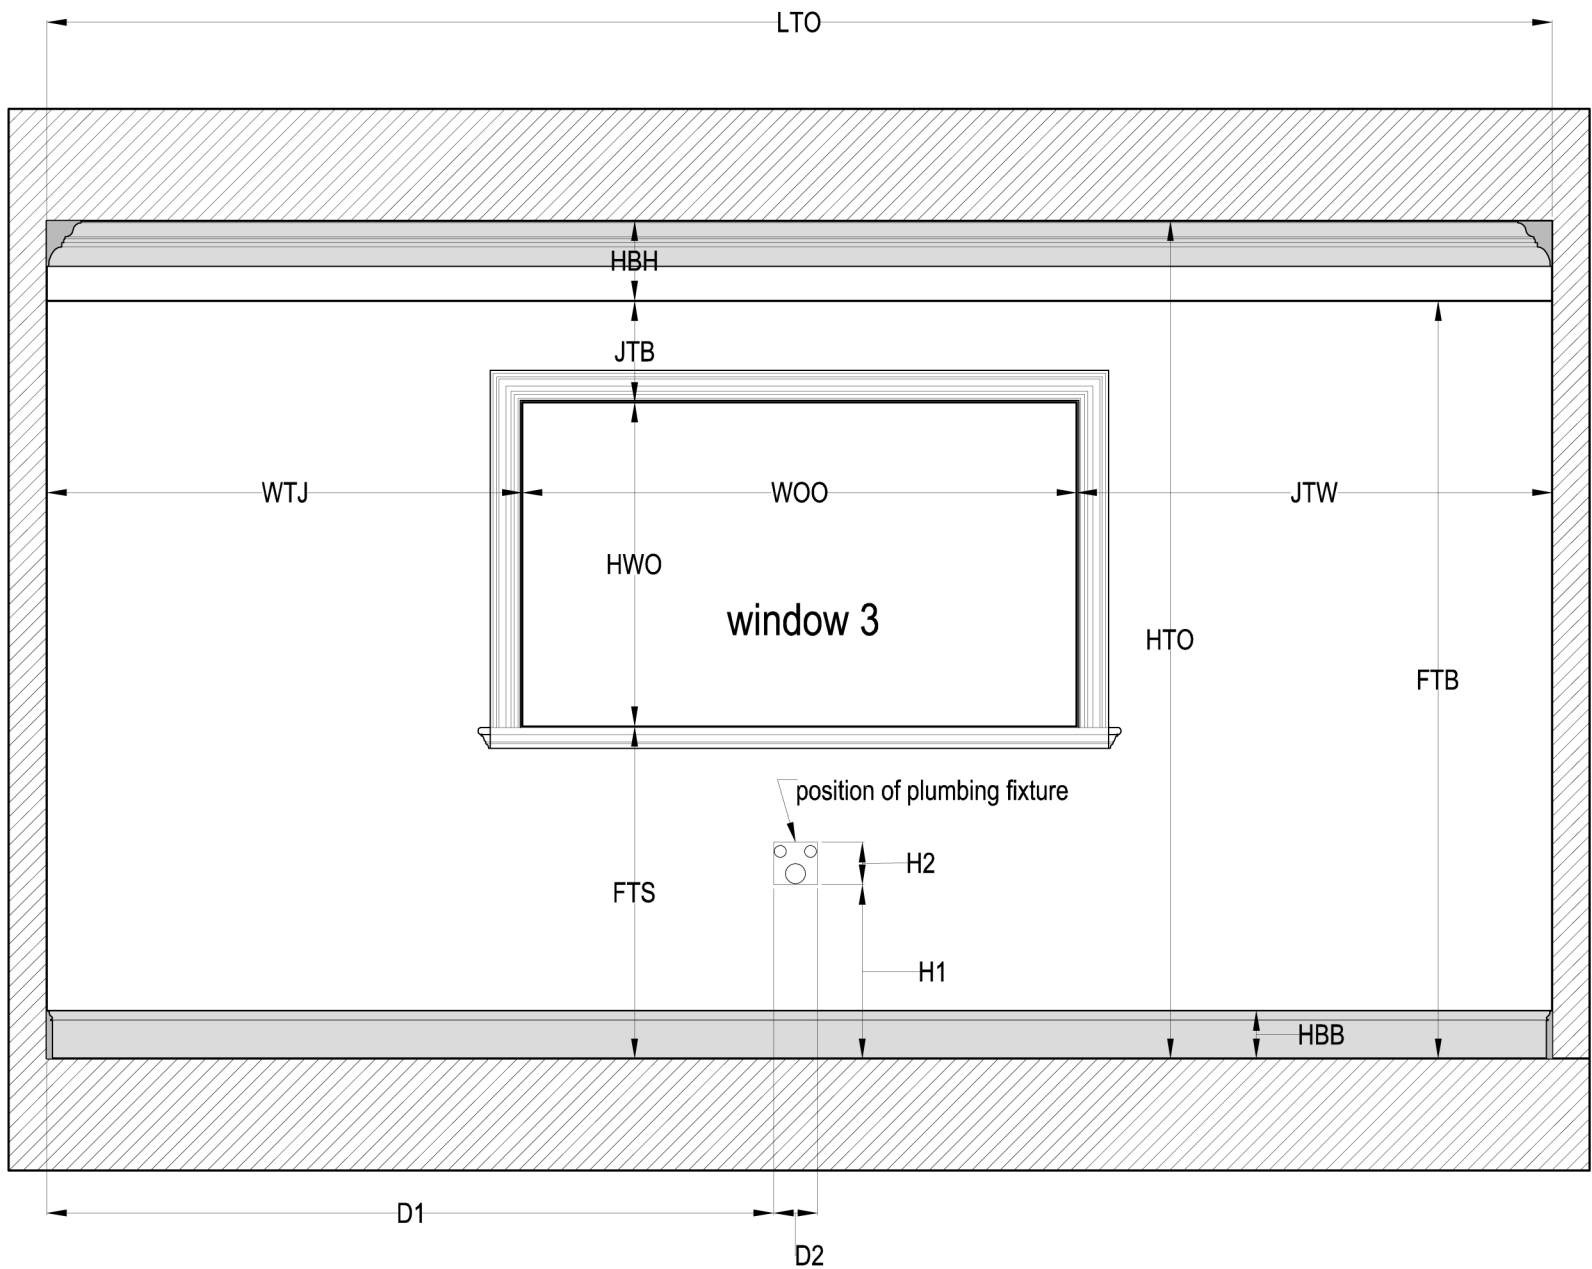

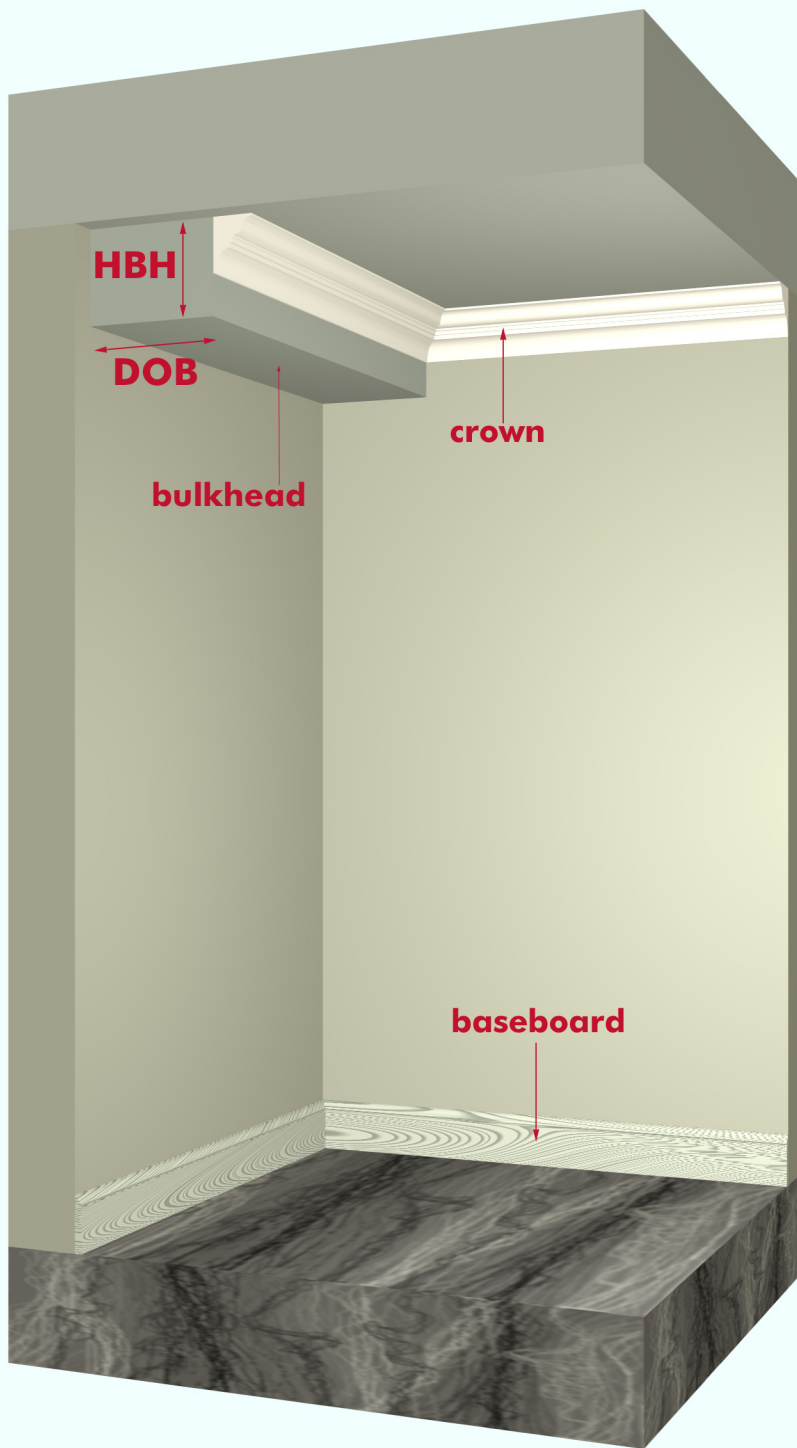



Plan- projection of a bulkhead

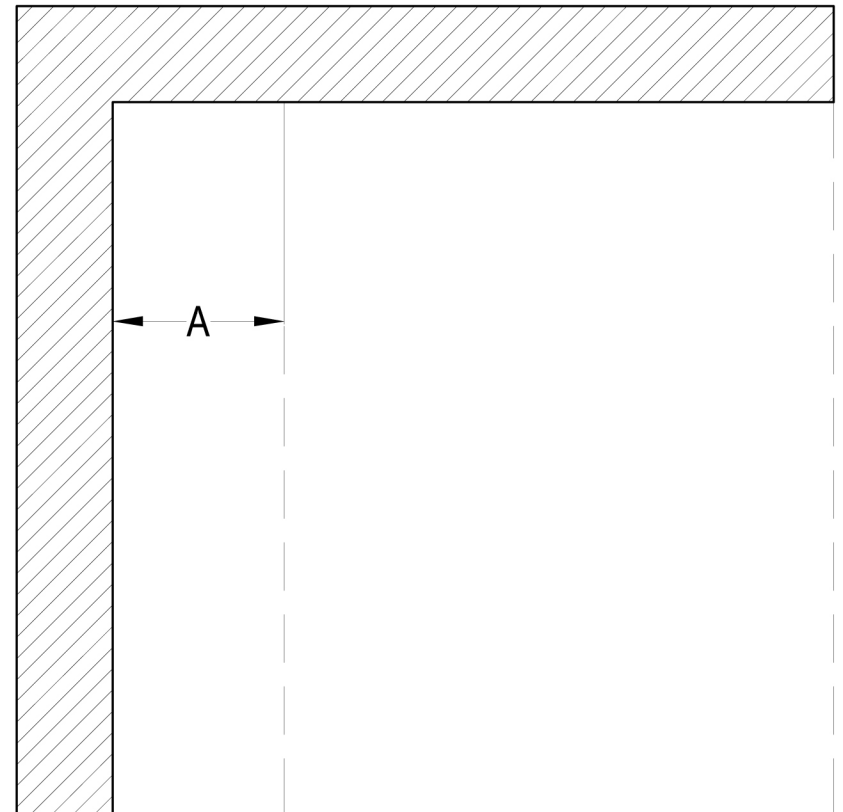

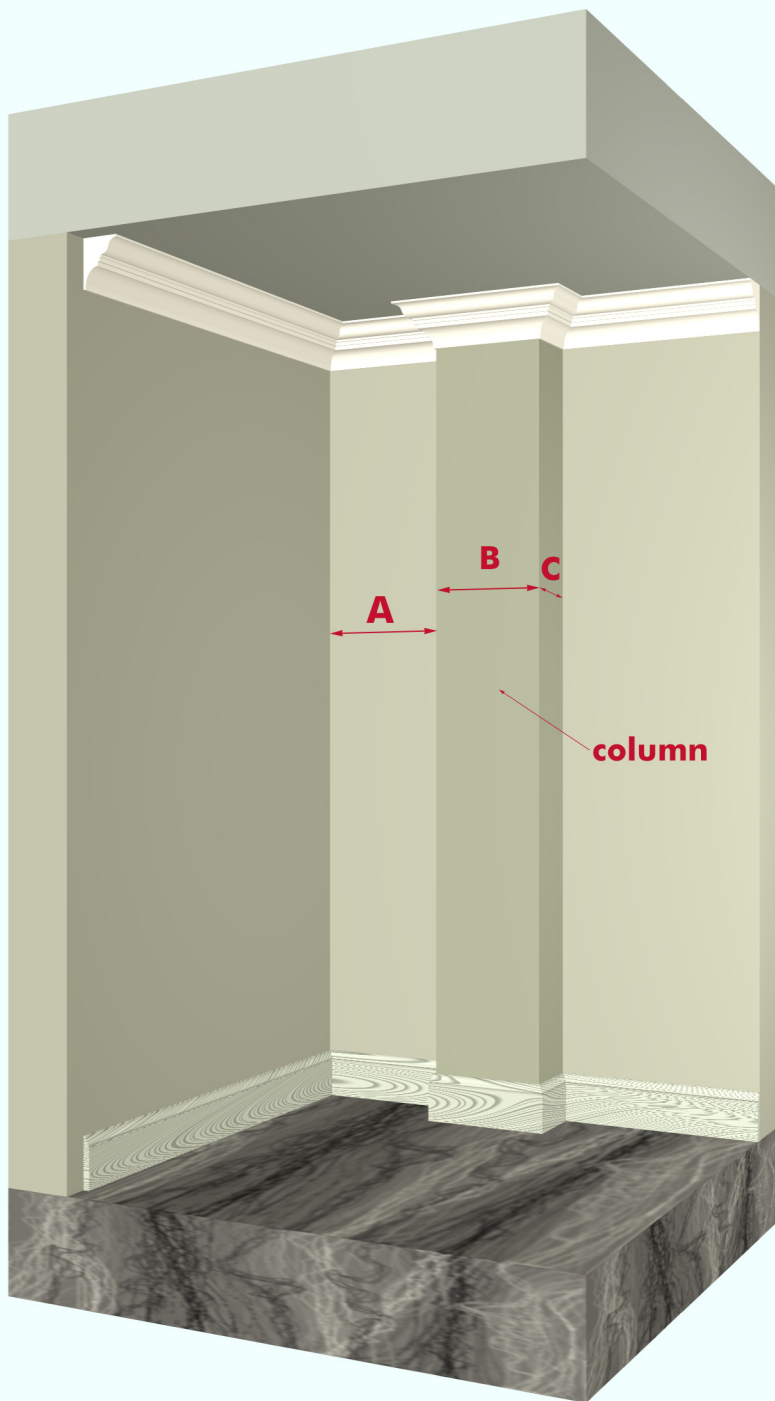

Plan- dimensions of a column

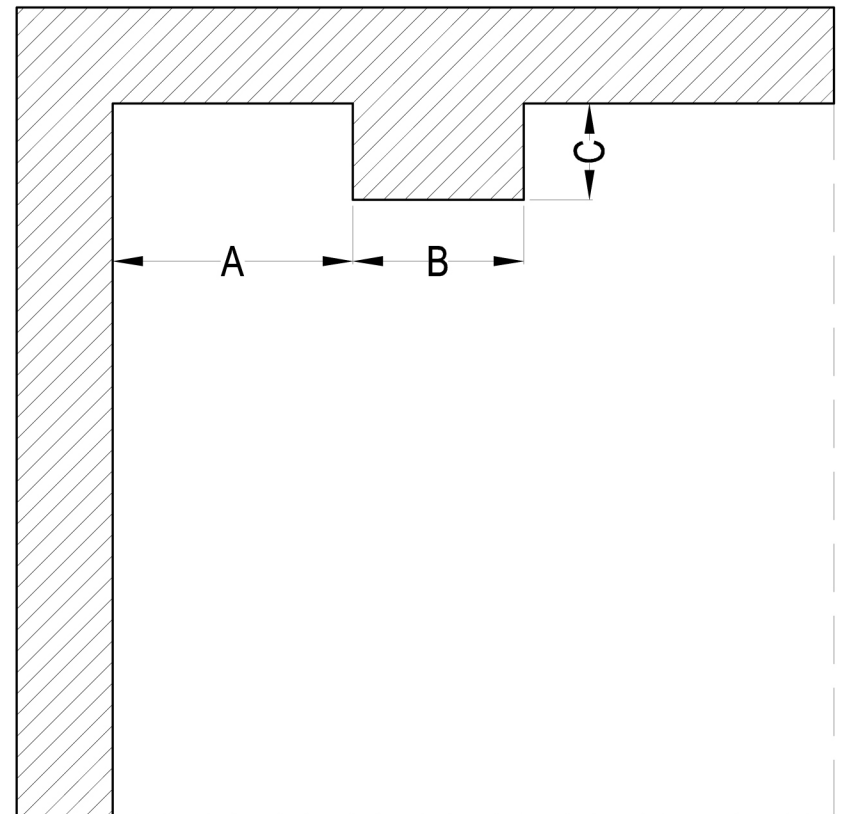

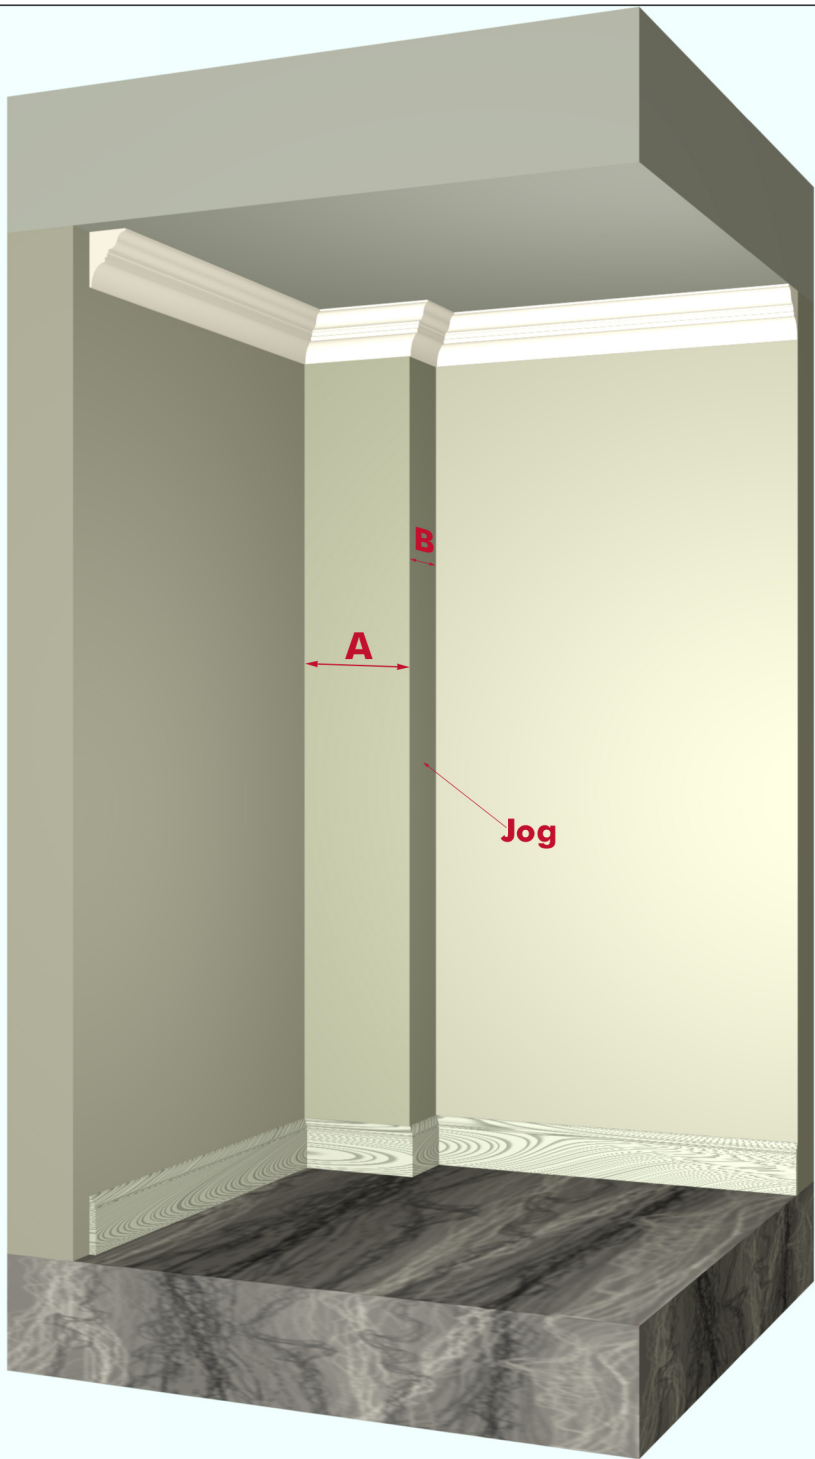

Plan- dimensions of a jog

